

TRUCHECK™ 2

QUICK REFERENCE GUIDE



OPERATOR'S MANUAL

34460

www.norbar.com/Downloads/Manuals

Part Number	43514 / 5	43516 / 7	43518 / 9	43520 / 1	43522 / 3	43524 / 5	43528 / 9	43530 / 1	43532 / 3
Capacity	3 N·m	10 N·m	30 N·m	65 N·m	260 lbf·ft	350 N·m	800 lbf·ft	1,100 N·m	2,100 N·m
Max Torque	3.6 N·m	12 N·m	36 N·m	78 N·m	312 lbf·ft	420 N·m	960 lbf·ft	1,320 N·m	2,310 N·m

PRESS
Changes Units

UNITS

PRESS & HOLD
Units Menu

PRESS
Changes Mode

MODE

PRESS & HOLD
Click Menu

PRESS
Changes Target

TARGET

PRESS & HOLD
Target Menu

PRESS
Resets Peak or Zeroes Reading

RESET

PRESS & HOLD
Version Screen

0

PRESS
Zeroes Reading

PRESS & HOLD
Version Screen

0

5 Seconds

EXIT

SETUP MENU

7.3 N·m

Hexagon Socket Head Cap Screws
ISO 4762 - M6 - 8.8
(not included)

35 N·m

Hexagon Socket Head Cap Screws
ISO 4762 - M10 - 12.9
(not included)

TruCheck™ 2 Plus

TruCheck™ 2

